

RUSH ship Nov 7

Work Order ID 151914

151914

Page 1

Friday, October 14, 2016 1:55:11 PM

Item ID: D350-591-113

Accept

N900040100

Setup Start

NS1

Revision ID:

Stop

NS2

Item Name: Heli-Access Step, Short, High Gear

Start Date: 10/21/2016 Start Qty: 6.00

6

Cust Item ID:

Required Date: 11/4/2016 Req'd Qty: 6.00

6

Customer:

Reference:

Approvals:

Process Plan:

Date: 10-10-17

Tooling:

Date:

Run Start

NR1

QC:

Date:

SPC (Y/N):

Date:

Stop

NR2

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

D2310

D

DSI 9525

A

100

Document Control

0.00

100

DOCUMENT CONTROL

DC

Memo

0.00

Doc.Control -USB or Paperwork

Photocopy bluefile & type labels per PPP D350-591-113 CHG005

X6 smf x6m/10 NOV 08 2016 DAS 24 9-89

110

0.00

110

Large Fab

Large Fab

Memo

0.30

Large Fab

1-Cut D2244 extrusion to 62.00" long as per Dwg D2310
2-Drill extrusion as per Dwg D2310 using drill Jig DT8230
3-Deburr

6 10-11-1

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Description Work Order Deviation		Disposition			

Root Cause		FAULT CATEGORY			
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐
Past Expiry Date ☐	Manufacturing Process ☐	OTHER :			
Misidentified ☐	Past Due ☐				

Friday, October 14, 2016 1:55:11 PM

Page 2

[illegible]

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			
				Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER :					

Friday, October 14, 2016 1:55:11 PM

Page 3

Quality Control

6 Q 16-11-7

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐								
Misidentified ☐	Past Due ☐	OTHER :							

Friday, October 14, 2016 1:55:11 PM

Page 4

Setup Start *NS1*

Stop ***NS2***

6

Cust Item ID:

6

Customer:

Run Start *NR1*

Stop *NR2*

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
150	QC5- Inspect part completeness to step on W/O	0.00							DAS 38 9-89
150						e			

NOV 07 2016

160

HandFinish	Memo	0.30
------------	------	------

Hand Finishing

170

Large Fab	Memo	0.28
-----------	------	------

Large Fab

1-Rivet as per Dwg D2310
2-Inspect for foreign object as per QSI 024
3-Weld Aft end cap as per Dwg D2310
A/R AL ROD Batch: B134826
4-Grind end cap welds flush

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐
OTHER : ☐					

Work Order ID 151914

Friday, October 14, 2016 1:55:11 PM

151914

Page 5

Item ID: D350-591-113

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Heli-Access Step, Short, High Gear

Start Date: 10/21/2016 Start Qty: 6.00

6

Cust Item ID:

Required Date: 11/4/2016 Req'd Qty: 6.00

6

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
180	QC10- Inspect visual per QSI004- ground welds	0.00				<u>6</u>			DAS 24 9-89
180									
QC	Memo	0.00							

Quality Control

190	QC5- Inspect part completeness to step on W/O	0.00				<u>6</u>			DAS 24 9-89
190									
QC	Memo	0.02							

Quality Control

200	Chemical Conversion Coat per QSI005 4.1	0.00				<u>(x6)</u>	<u>8</u>		2016/11/08
200									
HandFinish	Memo	0.10							

Hand Finishing

BEB.

Work Order ID 151914

Friday, October 14, 2016 1:55:11 PM

151914

Page 6

Item ID: D350-591-113 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Heli-Access Step, Short, High Gear
Start Date: 10/21/2016 Start Qty: 6.00 ***6*** Cust Item ID:
Required Date: 11/4/2016 Req'd Qty: 6.00 ***6*** Customer:
Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
210 *210* Powdercoat Powder Coating	White Gloss(Ref:4.3.5.1) per OSI005 4.3-Alum <i>m 134778.</i> Memo START TIME: <i>2:40.</i> OVEN TEMPERATURE: <i>320°</i> FINISH TIME: <i>3:10.</i>	0.00 0.11						<i>6:00:16-11-8</i> <i>DAS 34 9-89</i>	
220 *220* HandFinish Hand Finishing	Wing Walk as per dwg OSI005 4.4 Batch <i>1135819</i> Memo ***Install Dart labels after wing walk***	0.00 0.16				<i>x6</i>	<i>✓</i>	<i>2016/11/09</i> <i>BEB.</i>	
230 *230* QC Quality Control	QC3- Inspect Part Finish Memo ***Install Dart labels after wing walk***	0.00 0.01				<i>6</i>		<i>DAS 38 9-89</i> NOV 10 2016	

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval		
Description Work Order Deviation				Disposition					

Root Cause				FAULT CATEGORY							
Environment	☐	No Re-verification	☐	Pressure/Forced	☐	Temperature/Cure	☐	Power Loss/Surge	☐	Positioned Wrong	☐
Design	☐	Operator	☐	Bending	☐	Set-up	☐	Folio/Program	☐	Outside Dimensions	☐
Doc/Data	☐	Offset/Setup	☐	Centre Not Concentric	☐	BOM/Route	☐	Grain	☐	Over/Under tolerance	☐
Equip/Tooling	☐	Supplier	☐	Cracks	☐	Broken/Damage/Defect	☐	Weld	☐	Part Incorrect	☐
Handling/Pre	☐	Training	☐	Crimp/Kink/Ripple/Wave	☐	Inspection Incomplete/Unqualified	☐	Wrong Stock Pulled	☐	Part Lost/Missing	☐
Material	☐	Use for Testing	☐	Cuffs	☐	Contamination	☐	Out of Sequence	☐	Part Moved	☐
Internal Transport	☐	Poor Information	☐	Crushing	☐	Countersink	☐	Off-set	☐	Drawing	☐
Tribal Knowledge	☐	Rushing	☐	Heat Treat	☐	Cut Too Short	☐	Mislabeled	☐	Finish	☐
LOA	☐	Product Improvement	☐	Wave/Twist in Tube	☐	Instructions Incomplete/Unclear	☐	Fit/Function	☐	Misread	☐
Substation	☐	Process Improvement	☐	Marks/Chatter	☐	Drill Holes	☐	Misaligned/off center	☐	Turning Sequence	☐
Past Expiry Date	☐	Manufacturing Process	☐	OTHER :							
Misidentified	☐	Past Due	☐								

Work Order ID 151914

Friday, October 14, 2016 1:55:11 PM

151914

Page 7

Item ID: D350-591-113

Accept

N900040100

Setup

Start

NS1

Revision ID:

Stop

NS2

Item Name: Heli-Access Step, Short, High Gear

Start Date: 10/21/2016 Start Qty: 6.00

6

Cust Item ID:

Required Date: 11/4/2016 Req'd Qty: 6.00

6

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run

Start

NR1

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop

NR2

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

240

Pick Kit

0.00

240

Packaging

Memo

0.01

Packaging

DAS
26
9-89

NOV 10 2016

250

QC4- 100% Inspect kits for completeness

0.00

250

QC

Memo

0.03

Quality Control

G SMB
10/11/16

260

PACKAGING RESOURCE #1

0.00

260

Packaging

Memo

0.00

Packaging

Identify and pack for shipping as per PPP D350-591-113
Location: _____

sold

G SMB
10/11/16

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			
				Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Work Order ID 151914

Friday, October 14, 2016 1:55:11 PM

151914

Page 8

Item ID: D350-591-113

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Heli-Access Step, Short, High Gear

Start Date: 10/21/2016 Start Qty: 6.00

6

Cust Item ID:

Required Date: 11/4/2016 Req'd Qty: 6.00

6

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
270	QC21- Final Inspection - Work Order Release	0.00							
270									
QC	Memo	0.10							
Quality Control									

16/11/14
ME
16-11-10

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐				
Date :	Step #:	QTY Effective :			MRB (QSI042) Approval	
Description Work Order Deviation		Disposition				
					Completed By	
					Lead hand / Supervisor Approval Verification	
					QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐ Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐		FAULT CATEGORY Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐				
OTHER : ☐						

Picklist Print

Friday, October 14, 2016 1:55:11 PM

Page 1

Work Order ID: 151914

151914

Parent Item: D350-591-113

D350-591-113

Parent Item Name: Heli-Access Step, Short, High Gear

Start Date: 10/21/2016

Required Date: 11/4/2016

Start Qty: 6.00

Required Qty: 6.00

Comments: IPP Rev:H04.11.09ReformatKJ/JLM
ECN10-586 10.06.18 DD verf:EC

IPP Rev:E as per

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D2244-116		Manufactured	No			110	Each	48.0000	1	6			
✓ *D2244-116*													
STEP EXTRUSION													

Location	Loc Qty	Loc Code
HALL	48	
117818	48	
WA003	-0.0000368	

D2275		Manufactured	No			130	Each	4.0000	1	6			
✓ *D2275*													
Bushing													

Location	Loc Qty	Loc Code
WA003	4	
148924	4	

D2582		Manufactured	No			170	Each	15.0000	1	6			
✓ *D2582*													
Hi-Skid Step Leg Assembly													

Location	Loc Qty	Loc Code
WA003	15	
150246	5	
151367	10	

D2673-34		Manufactured	No			130	Each	47.0000	2	12			
✓ *D2673-34*													
End Plate													

Location	Loc Qty	Loc Code
WA003	47	
145993	24	
148718	23	

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐ Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐		FAULT CATEGORY Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Picklist Print

Friday, October 14, 2016 1:55:11 PM

Page 2

Work Order ID: 151914

151914

Parent Item: D350-591-113

D350-591-113

Parent Item Name: Heli-Access Step, Short, High Gear

Start Date: 10/21/2016

Required Date: 11/4/2016

Start Qty: 6.00

Required Qty: 6.00

DAS
26
9-89

K591-113 Manufactured No

240

Each

0.0000

1

6

K591-113

Short Step Instln

MS20600-AD4W3

Purchased

No

170

Each

735.0000

16

96

MS20600-AD4W3

Cherry Rivet

**

**

B151736

NOV 08 2016

DAS
24
9-89

Location

Loc Qty

Loc Code

CCK004

600

m135603

600

ST308

28

m129795

28

WA003

107

m135297

107

56

M135603 → 40

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			
				Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

DART

DESIGN KE	DRAWN BY PH	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED [Signature]	APPROVED [Signature]	DRAWING NO. D2310	REV. D SHEET 1 OF 2
DATE 05.11.14		TITLE HIGH SHORT STEP ASSEMBLY	SCALE NTS
A	94.11.10	NEW ISSUE	
B	97.05.22	END CAPS CHANGED	
C	97.07.23	ADDED BUSHING AND FACING INFO	
D	05.11.14	UPDATE FINISHING NOTE	

D2310 HIGH SHORT STEP ASSEMBLY PARTS LIST


Part No.	Description	QTY
D2310	High Short Step Assembly	X
D2244-62.0	STEP EXTRUSION*	1
D2275	BUSHING	1
D2582	STEP LEG ASSEMBLY	1
D2673-34	STEP END PLATE	2
MS20600AD4W3	Rivets	16 ²⁰

*cut per drawing

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 151914
[Signature]

RELEASED
05.11.28 [Signature]**Copyright © 1994 by DART AEROSPACE LTD**

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

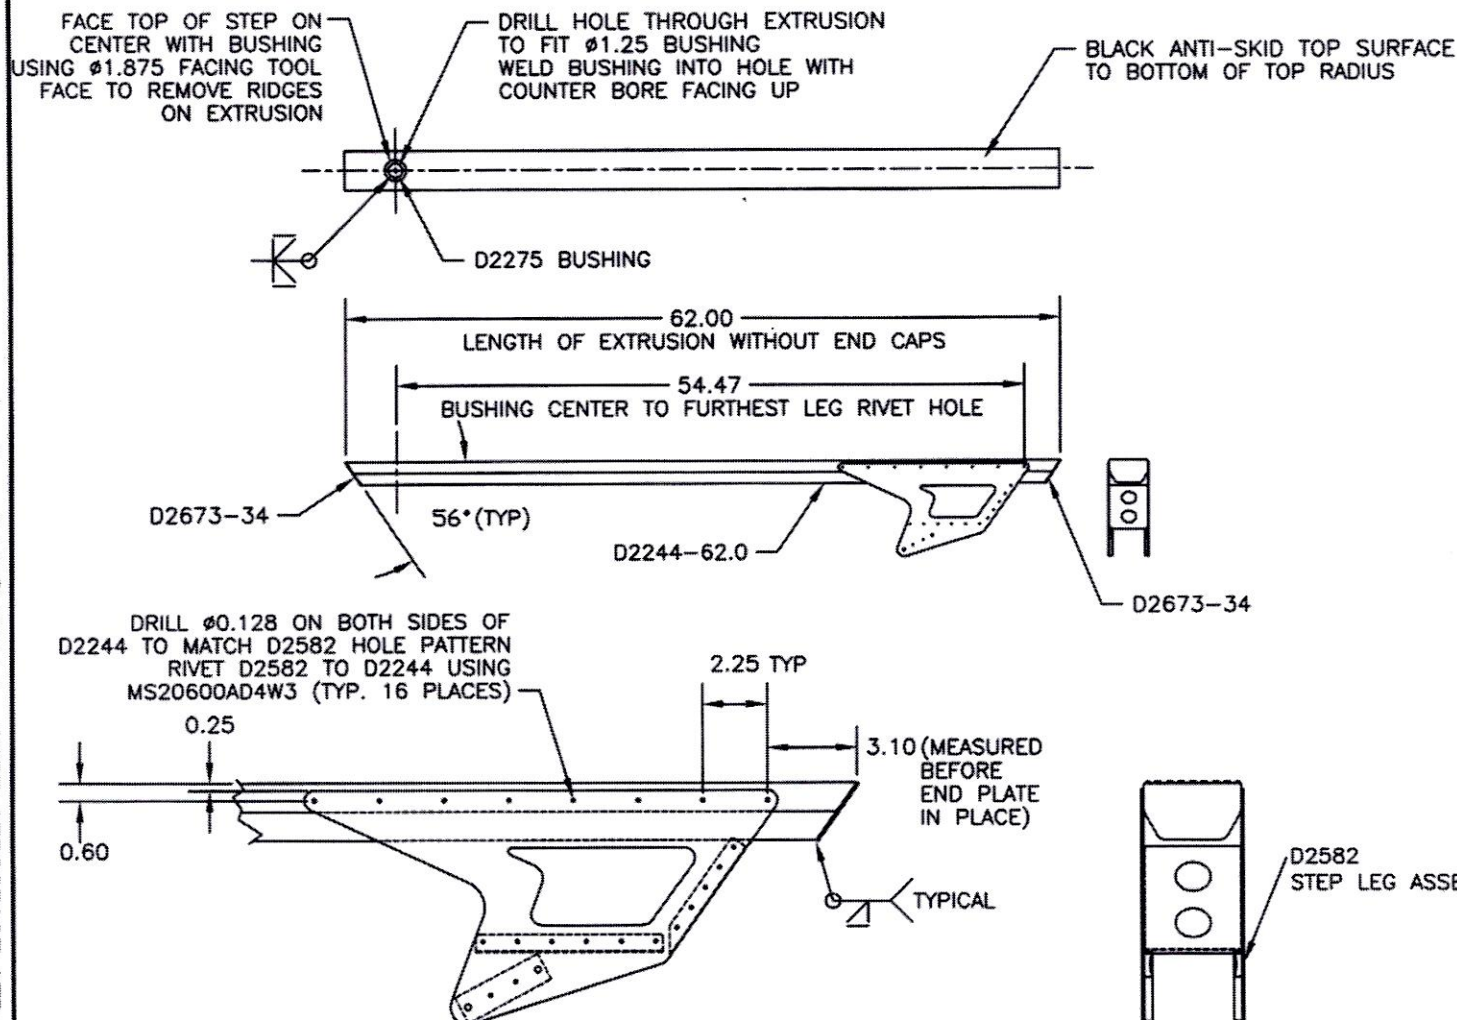DART

STEP LEG DETAIL

D2310 HIGH SHORT STEP ASSEMBLY

- 1) MAKE FROM D2244 STEP EXTRUSION
- 2) WELD PER DART QSI 004
- 3) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005 4.1
POWDER COAT ASSEMBLY WHITE (4.3.5.1) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 4) ALL DIMENSIONS ARE IN INCHES
- 5) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

DESIGN	DRAWN BY	DART AEROSPACE LTD
KE	PH	HAWKESBURY, ONTARIO, CANADA
CHECKED	APPROVED	DRAWING NO.
		D2310
DATE	TITLE	REV. D
05.11.14	HIGH SHORT STEP ASSEMBLY	SHEET 2 OF 2
		SCALE
		NTS

RELEASED
05-11-28

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-591 REV. G AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-591 REV. 3

REF TCCA STC: SH92-6
REF FAA STC: SH967NE

PURPOSE:

TO PROVIDE AN OPTIONAL CUSHION KIT TO BE INSTALLED ON THE D350-591-111A/-113/-115/-117A/-119 *Heli-Access-Step™* (THE D2856-400-720 ABRASION STRIP IS REPLACED WITH THE D3595-200-300 CUSHION).

CHANGE:

FOR D350-591-111A/-113/-115 @ CHG 005 (OR LATER), D350-591-117A @ CHG 003 (OR LATER) AND D350-591-119 @ CHG 004 (OR LATER), THE PARTS LIST OF INSTALLATION INSTRUCTIONS D350-591 AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-591 IS AMENDED AS FOLLOWS:

QTY -111A	QTY -113	QTY -115	QTY -117A	QTY -119	Part Number	Description
X					D350-591-111A	Heli-Access-Step™, Long Step – High Skid
	X				D350-591-113	Heli-Access-Step™, Short Step – High Skid
		X			D350-591-115	Heli-Access-Step™, Short Step – Low Skid
			X		D350-591-117A	Heli-Access-Step™, Pre-Flight Step
				X	D350-591-119	Heli-Access-Step™, Long Step – Low Skid
	1				D2310	STEP ASSEMBLY (HIGH-SHORT)
1					D2311	STEP ASSEMBLY (HIGH-LONG)
		1			D2354	STEP ASSEMBLY (LOW-SHORT)
				1	D2355	STEP ASSEMBLY (LOW-LONG)
4	2	2	2	2	D2171	CLAMP
4	2	2	2	2	D2182B035	CUSHION
8	4	4	4	4	D2274	RADIUS BLOCK
			1		D2362-041	SUPPORT BRACKET
2	1			1	D2362-3	SUPPORT BRACKET
		1			D2362-5	SUPPORT BRACKET
2	1	1	1	1	D3595-200-300	CUSHION (NEW)
2	2	2		2	AN3-37A	BOLT
		4			AN4-20A	BOLT (REPLACED, WAS AN4-16A)
8	4			4	AN4-21A	BOLT (REPLACED, WAS AN4-20A)
1	1	1	4	1	AN4-22A	BOLT
4	4	4		4	NAS1149D0363J	WASHER (OR AN960JD10)
10	6	2	4	6	NAS1149D0463J	WASHER (OR AN960JD416)
		4			NAS1149D0416J	WASHER (OR AN960JD416L)
2	2	2		2	MS21042L3	NUT
9	5	5	4	5	MS21042L4	NUT

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 151914
16-10-17

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
BY: 
D. SHEPHERD (DE # 02)

DATE: 10.06.08
CERT. NO.: SH92-6
ISSUE NO.: 11

A	NEW ISSUE.	JPH	10.06.08
REV.	DESCRIPTION	BY	DATE
DESIGN		DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN			
CHECKED		DRAWING NO. REV. A DSI 9525 SHEET 1 OF 4	
MFG. APPR.	N/A		
APPROVED		TITLE SCALE STEP CUSHION CHANGE NTS	
DE APPR.			
DATE 10.06.08		COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

THE DSI-9525-XXX KITS THAT ARE AVAILABLE FROM DART TO UPGRADE THE D350-591-111A/-113/-115 KITS @ CHG 004 (OR EARLIER), THE D350-591-117A KIT @ CHG 002 (OR EARLIER) AND THE D350-591-119 KIT @ CHG 003 (OR EARLIER) ARE AS FOLLOWS:

QTY -011	QTY -013	QTY -015	QTY -017	Part Number	Description
X				DSI-9525-011	STEP CUSHION KIT (FOR D350-591-111A)
	X			DSI-9525-013	STEP CUSHION KIT (FOR D350-591-113/-119)
		X		DSI-9525-015	STEP CUSHION KIT (FOR D350-591-115)
			X	DSI-9525-017	STEP CUSHION KIT (FOR D350-591-117A)
2	1	1	1	D3595-200-300	CUSHION
		4		AN4-20A	BOLT
8	4			AN4-21A	BOLT
			4	AN4-22A	BOLT
8	4	4	4	NAS1149D0463J	WASHER (OR AN960JD416)
8	4	4	4	MS21042L4	NUT

INSTRUCTIONS:

TO INSTALL THE D3595-200-300 CUSHION:

1. REMOVE THE STEP PER ICA-D350-591 SECTION 32.2
2. REMOVE THE D2856-400-720 ABRASION STRIP PER ICA-D350-591 SECTION 32.4
3. POSITION THE D3595-200-300 CUSHION AS INDICATED ON SHEET 3 OR 4 (AS APPLICABLE) OF THIS SERVICE INSTRUCTION.
4. REINSTALL THE STEP PER ICA-D350-591 SECTION 32.1 AS APPLICABLE USING THE NEW HARDWARE PROVIDED AS SHOWN ON SHEET 3 OR 4 (AS APPLICABLE) OF THIS SERVICE INSTRUCTION.

WEIGHT AND BALANCE:


THERE IS A NEGLIGIBLE WEIGHT INCREASE WITH THIS MODIFICATION.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01


APPROVED
BY: 
D. SHEPHERD (DE # 02)

DATE: 10.06.08
CERT. NO.: SH92-6
ISSUE NO.: 11


DESIGN	90	DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9525	SHEET 2 OF 4
APPROVED		TITLE	SCALE
DE APPR.		STEP CUSHION CHANGE	NTS
DATE	10.06.08	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

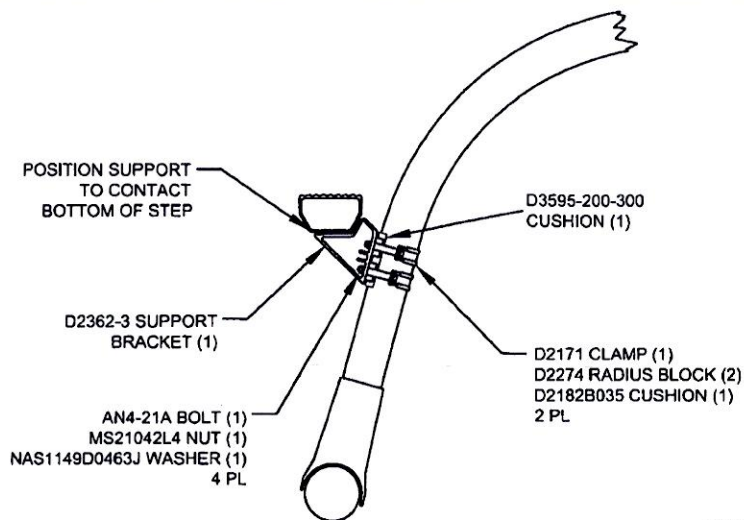

SECTION C-C: CENTER SUPPORT
(D350-591-111A ONLY)
(NOT TO SCALE)

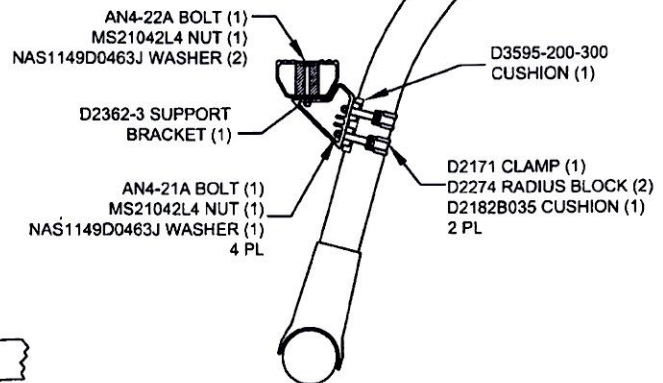

SECTION D-D: AFT ATTACHMENT
(D350-591-111A/-113/-119 ONLY)
(NOT TO SCALE)

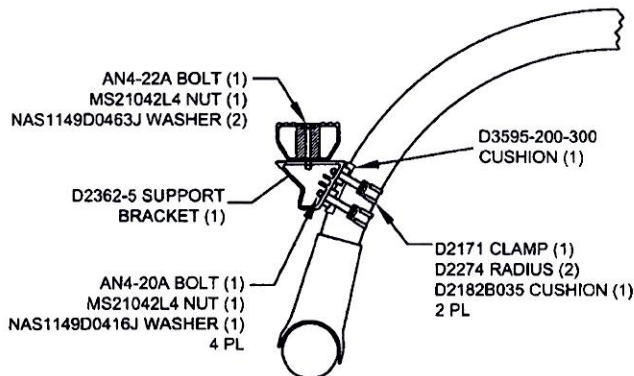

SECTION E-E: AFT ATTACHMENT
(D350-591-115 ONLY)
(NOT TO SCALE)

FIGURE 32-9: Crosstube Attachment
REF ICA-D350-591

FIGURE 9: Crosstube Attachment
REF D350-591

CANADA DEPARTMENT OF TRANSPORT AIRCRAFT CERTIFICATION BRANCH DAO # 01-O-01	
APPROVED	
BY: <i>[Signature]</i>	D. SHEPHERD (DE # 02)
DATE: 10.06.08	
CERT. NO.: SH92-6	
ISSUE NO.: 11	

DESIGN	<i>90</i>	DART AEROSPACE LTD	
DRAWN	<i>11</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>13</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9525	SHEET 3 OF 4
APPROVED	<i>140</i>	TITLE	SCALE
DE APPR.	<i>141</i>	STEP CUSHION CHANGE	NTS
DATE	10.06.08	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

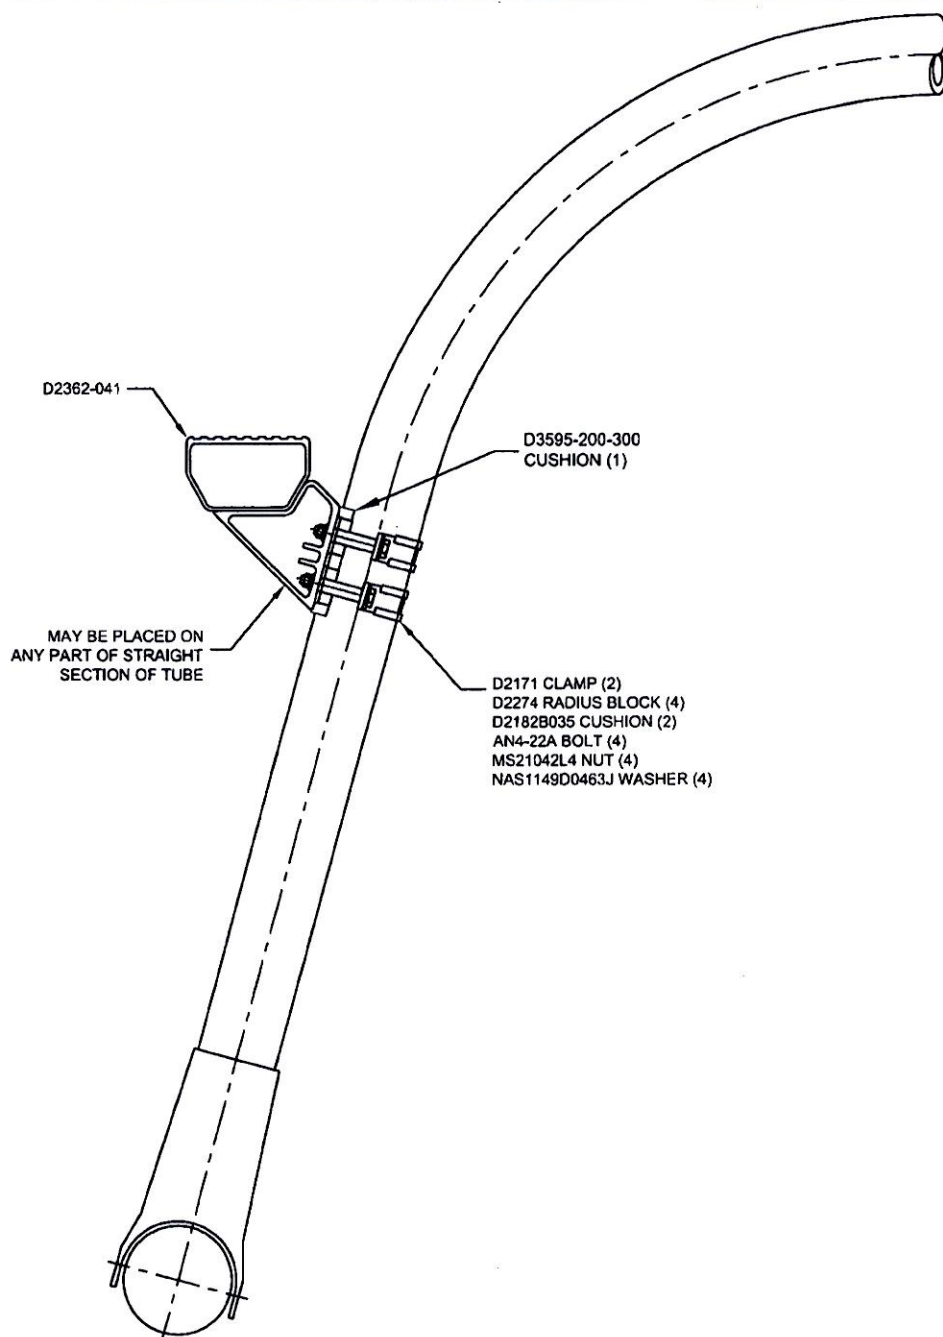


FIGURE 32-10: D350-591-117A Heli-Access-Step™, Pre-Flight Step
REF ICA-D350-591

FIGURE 10: D350-591-117A Heli-Access-Step™, Pre-Flight Step
REF D350-591

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: [Signature]
D. SHEPHERD (DE # 02)

DATE: 10.06.08
CERT. NO.: SH92-6
ISSUE NO.: 11

DESIGN	<u>9</u>	DART AEROSPACE LTD	
DRAWN	<u>[Signature]</u>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<u>[Signature]</u>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9525	SHEET 4 OF 4
APPROVED	<u>[Signature]</u>	TITLE	SCALE
DE APPR.	<u>[Signature]</u>	STEP CUSHION CHANGE	NTS
DATE	10.06.08	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

Work Order ID 151914***151914***

Page 1

Wednesday, November 09, 2016 10:17:40 A

Item ID: D350-591-113

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Heli-Access Step, Short, High Gear

Start Date: 10/21/2016 Start Qty: 6.00

6

Cust Item ID:

Required Date: 11/4/2016 Req'd Qty: 6.00

6

Customer:

Reference:

Approvals:

Process Plan:

Date:

Tooling:

Date:

Run Start ***NR1***

QC:

Date:

SPC (Y/N):

Date:

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

D2310

D

DSI 9525

A

100

Document Control

0.00

100

DOCUMENT CONTROL

DC

Memo

0.00

Doc.Control -USB or Paperwork

Photocopy bluefile & type labels per PPP D350-591-113 CHG005

110

0.00

110

Large Fab

Large Fab

Memo

0.30

Large Fab

1-Cut D2244 extrusion to 62.00" long as per Dwg D2310
2-Drill extrusion as per Dwg D2310 using drill Jig DT8230
3-DeburrDAS
21
9-89

NOV 09 2016